Smart Sensors (Inductive Displacement Type)

ZX-E Series

Smart Sensors that use the eddy current method are now available. Develop new applications with sub-micron sensing technology.



Ordering Information

Sensors

Sensor Heads

Shape	Dimensions	Sensing distance	Resolution *1	Model
Cylindrical	3 dia. x 18 mm	0.5 mm	1 μm	ZX-EDR5T
	5.4 dia. x 18 mm	1 mm		ZX-ED01T *2
	8 dia. x 22 mm	2 mm		ZX-ED02T *2
Screw-shaped	M10 x 22 mm			ZX-EM02T *2
	M18 x 46.3 mm	7 mm		ZX-EM07MT *2
Flat	30 x 14 x 4.8 mm	4 mm		ZX-EV04T *2 *3
Heat-resistant, cylindrical	M12 x 22 mm	2 mm		ZX-EM02HT *4

*1: For an average count of 4,096.

*2: Models with Protective Spiral Tubes are also available. Add a suffix of "-S" to the above model numbers when ordering. (Example: ZX-ED01T-S)

*3: Be sure to use ZX-EDA Amplifier Unit version 1,200 or later with the ZX-EV04.

*4: Be sure to use ZX-EDA Amplifier Unit version 1,300 or later with the ZX-EM02H.

Amplifier Units

Appearance	Power supply	Output type	Model
	DC	NPN	ZX-EDA11
		PNP	ZX-EDA41

Note: Compatible connection with the Sensor Head.

Accessories (Order Separately)

Calculating Unit

Appearance	Model
	ZX-CAL2

Amplifier Mounting Brackets

Appearance	Model	Remarks
	ZX-XBE1	Attached to each Sensor Head
	ZX-XBE2	For DIN track mounting

SmartMonitor Sensor Setup Tool for **Personal Computer Connection**

Appearance	Name	Model
	ZX-series Communica- tions Interface Unit	ZX-SF11
+ CD-ROM	ZX-series Communica- tions Interface Unit + Setup Software	ZX-SFW11E
CD-ROM	ZX-series Sensor Setup and Logging Software	ZX-SW11EV2

Cables with Connectors on Both Ends (for Extension)

Cable length	Model	Quantity
1 m	ZX-XC1A	1
4 m	ZX-XC4A	
8 m	ZX-XC8A	

Specifications

Sensor Heads

		Model	ZX-EDR5T	ZX-ED01T	ZX-ED02T/ EM02T	ZX-EM07MT	ZX-EV04T	ZX-EM02H
Measurement range		0 to 0.5 mm	0 to 1 mm	0 to 2 mm	0 to 7 mm	0 to 4 mm	0 to 2 mm	
Sensing object			Magnetic metals (Measurement ranges and linearities are different for non-magnetic metals. Refer to <i>Engineering Data</i> on page 4.)					
Standard reference object		18×18×3 mm	30×30×3 mm 60×60×3 mm			45×45×3 mm		
		Material: ferrous (Material: ferrous (S50C)					
Resolution *1			1 μm					
Linearity *2			±0.5% F.S.					±1.0% F.S. *5
Linear output rang	ge		Same as measure	ement range.				
Temperature characteristic *3 (including Amplifier Unit)		0.15% F.S./°C	0.07% F.S./°C				0.1% F.S./°C	
Ambient temper-	Operatir	ig *4	0 to 50°C (with no	-10 to 60°C (wi	th no icing or cor	ndensation)		-10 to 200°C
ature Storage *4		icing or conden- sation)	-20 to 70°C (with no icing or condensation)			–20 to 200°C		
Ambient humidity			Operating and storage: 35% to 85% (with no condensation)					
Insulation resistar	nce		50 MΩ min. (at 500 DC)					
Dielectric strength	า		1,000 VAC, 50/60 Hz for 1 min between charged parts and case					
Vibration resistan	ce (dest	ruction)	10 to 55 Hz with 1.5-mm double amplitude for 2 h each in X, Y, and Z directions					
Shock resistance	(destruc	tion)	500 m/s², 3 times each in X, Y, and Z directions					
Degree of protecti	on (Sen	sor Head)	IEC60529, IP65	IEC60529, IP67	,			IEC60529, IP60 *6
Connection metho	bd		Connector relay (ector relay (standard cable length: 2 m)				•
Weight (packed state)		Approx. 120 g	Approx. 140 g		Approx. 160 g	Approx. 130 g	Approx. 160 g	
	Sensor Head	Case	Brass	Stainless steel	Brass		Zinc (nickel- plated)	Brass
		Sensing surface	Heat-resistant AB	S			<u> </u>	PEEK
Preamplifier		PES						
Accessories			Amplifier Mounting Brackets (ZX-XBE1), Instruction Manual					

*1:Resolution: The resolution is the deviation (±3σ) in the linear output when connected to the ZX-EDA Amplifier Unit. The above values indicate the deviations observed 30 minutes after the power is turned ON.

(The resolution is measured with OMRON's standard reference object at 1/2 of the measurement range with the ZX-EDA set for the maximum average count of 4,096 per period.)

The resolution is given at the repeat accuracy for a stationary workpiece, and is not an indication of the distance accuracy. The resolution may be adversely affected under strong electromagnetic fields.

- *2: Linearity: The linearity is given as the error in an ideal straight line displacement output when measuring the standard reference object. The linearity and measurement values vary with the object being measured.
- *3: Temperature characteristic: The temperature characteristic is measured with OMRON's standard reference object at 1/2 of the measurement range.
- *4: The ambient temperature given is only for the sensor head. It is -10 to 60°C for the preamp.
- *5: The value given is for an ambient temperature of 25°C.
- *6: Do not use in moist environments because the case is not waterproof.

■ Amplifier Units

Model	ZX-EDA11	ZX-EDA41	
Measurement period	150 μs		
Possible average count settings *1	1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1,024, 2,048, or 4,096		
Linear output *2	Current output: 4 to 20 mA/F.S., Max. load resistand	ce: 300 Ω	
	Voltage output: \pm 4 V (\pm 5 V, 1 to 5 V *3), Output impe	edance: 100 Ω	
Judgement outputs	NPN open-collector outputs, 30 VDC, 50 mA max.	PNP open-collector outputs, 30 VDC, 50 mA max.	
(3 outputs: HIGH/PASS/LOW)	Residual voltage: 1.2 V max.	Residual voltage: 2 V max.	
Zero reset input, timing input, reset input, judgement output hold input	ON: Short-circuited with 0-V terminal or 1.5 V or less	ON: Supply voltage short-circuited or supply volt- age within 1.5 V	
input, judgement output noid input	OFF: Open (leakage current: 0.1 mA max.)	OFF: Open (leakage current: 0.1 mA max.)	
Function		but value/resolution display	
	Linearity adjustment (materials selection)ScalingDisplay reverseDisplay OFF modeECO modeNumber of display digit changesSample holdPeak holdBottom hold, peak-to-peak holdSelf-peak holdSelf-bottom holdAverage holdDelay holdZero resetInitial resetLinearity initializationON-delay timerOFF-delay timerOne-shot timerPrevious value comparisAutomatic teachingDirect threshold value settingTiming inputsReset inputJudgement output hold inputMonitor focusLinear output correction(A-B) calculation *4Mutual interference prevention *4Sensor disconnection detectionZero reset memoryZero reset indicator		
Indications Voltage influence	Judgement indicators: High (orange), pass (green), low (yellow), 7-segment main digital display (red) 7-segment sub-digital display (yellow), power ON (green), zero reset (green), enable (green) 0.5% F.S. of linear output value at ±20% of power supply voltage		
(including Sensor)		apply voltage	
Power supply voltage	12 to 24 VDC ±10%, Ripple (p-p): 10% max.		
Current consumption	140 mA max. with power supply voltage of 24 VDC	(with Sensor connected)	
Ambient temperature	Operating and storage: 0 to 50°C (with no icing or condensation)		
Ambient humidity	Operating and storage: 35% to 85% (with no conde	nsation)	
Insulation resistance	20 MΩ min. (at 500 DC)		
Dielectric strength	1,000 VAC, 50/60 Hz for 1 min		
Vibration resistance (destruction)	10 to 150 Hz with 0.7-mm double amplitude for 80 min each in X, Y, and Z directions		
Shock resistance (destruction)	300 m/s ² , 3 times each in 6 directions (up, down, left, right, forward, backward)		
Connection method	Prewired (standard cable length: 2 m)		
Weight (packed state)	Approx. 350 g		
Materials	Case: PBT (polybutylene terephthalate), Cover: Pol	ycarbonate	
Accessories	Instruction Manual		

*1:The response speed of the linear output is calculated as the measurement period × (average count setting + 1) (with fixed sensitivity). The response speed of the judgement outputs is calculated as the measurement period × (average count setting + 1) (with fixed sensitivity).

*2: The output can be switched between a current output and voltage output using a switch on the bottom of the Amplifier Unit.


*3: Setting is possible via the monitor focus function.

*4: A Calculating Unit (ZX-CAL2) is required.


Engineering Data (Typical)


Measurement Distance vs. Linearity (with Linearity Adjusted for Standard Sensing Object)

ZX-EDR5T

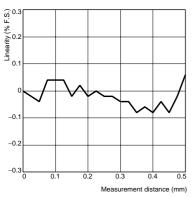




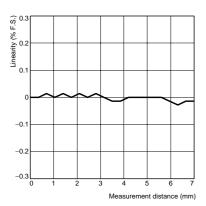

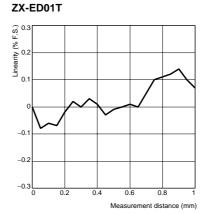




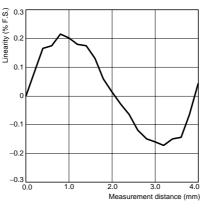

S50C □5 S50C □8


S50C S50C S50C S50C _12 _12 _18 _30 _45

S50C

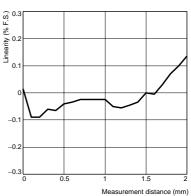

ZX-ED02T/ZX-EM02T



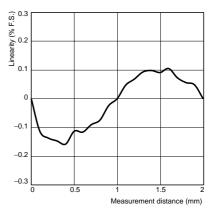

Size of Sensing Object vs. Linearity (with Linearity Adjusted for Each Sensing Object) ZX-EDR5T ZX-ED01T

0.6

0.5

0.4

0.3

0.2

0.1

-0.

-0.2


-0.3

-0.4


-0.5 -0.6 L 0 _ - -

_...


Linearity (% F.S.)

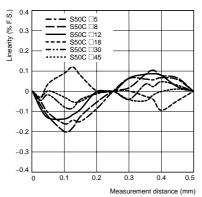

ZX-EM07MT

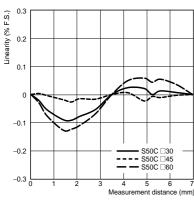



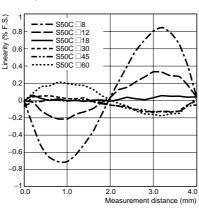


0.4


0.6

0.8


Measurement distance (mm)

ZX-EM02HT

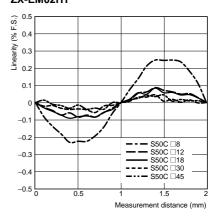





ZX-ED02T/ZX-EM02T

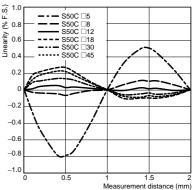


Size of Sensing Object vs. Linearity (with Linearity Adjusted for Standard Sensing Object) ZX-EDR5T ZX-ED01T

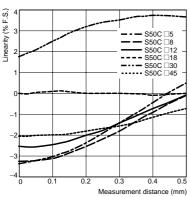




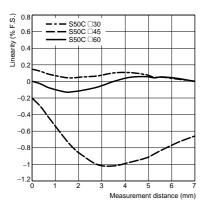


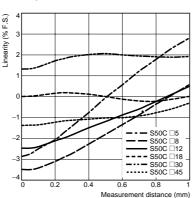




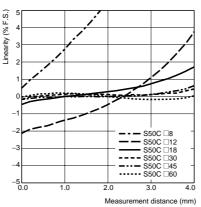


ZX-ED02T/ZX-EM02T

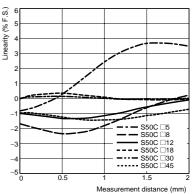


ZX-EM02HT

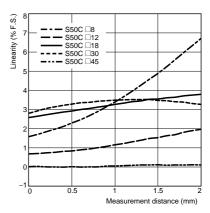


Material of Sensing Object vs. Linearity (with Linearity Adjusted for Each Sensing Object) ZX-EDR5T ZX-ED01T

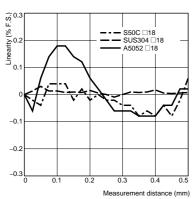


ZX-EM07MT

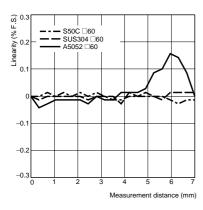


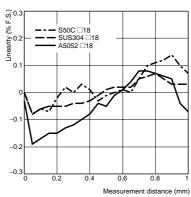

ZX-ED02T/ZX-EM02T

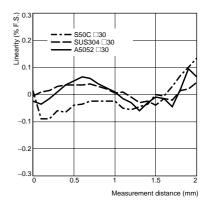



ZX-EV04T

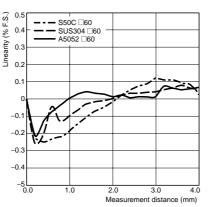


ZX-E Series Smart Sensors (Inductive Displacement Type)

Material of Sensing Object vs. Linearity (with Linearity Adjusted for Standard Sensing Object and Iron) ZX-EDR5T ZX-ED01T ZX-ED02T/ZX-EM02T

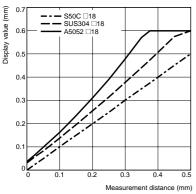


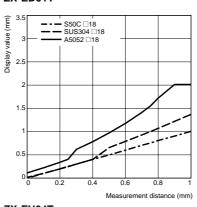

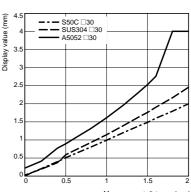



Measurement distance (mm)

ZX-EM07MT

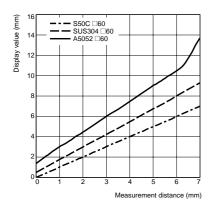


Temperature Characteristics ZX-EM02HT

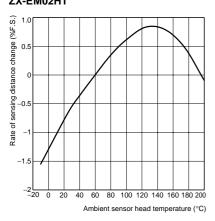

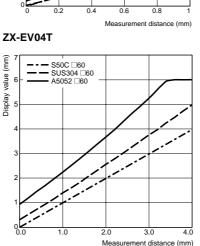


I/O Circuit Diagrams

NPN Amplifier Unit: ZX-EDA11

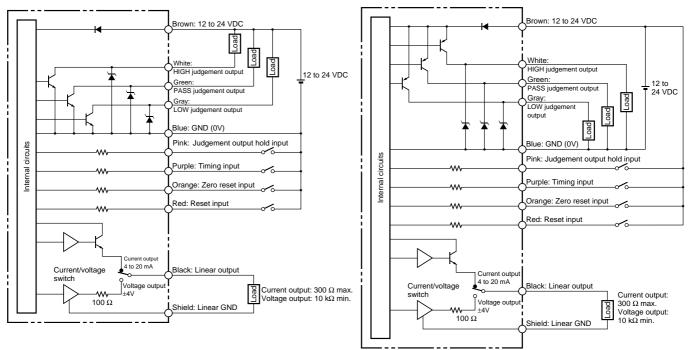

PNP Amplifier Unit: ZX-EDA41


Connections: Amplifier Unit

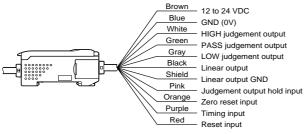


- Note 1. Use a separate stabilized power supply for the Amplifier Unit, particularly when high resolution is required.
 - Wire the Unit correctly. Incorrect wiring may result in damage to the Unit. (Do not allow wiring, particularly the linear output, to come into contact with other lines.)
 - 3. Use the blue (0-V) line for the power supply and use the shield wire (linear output ground) together with the black (linear output) line for linear output. Each of these grounds must be used for the designed purpose. When not using the linear output, connect the linear output ground to the 0-V ground.

Part Names

<u>Sensors</u>

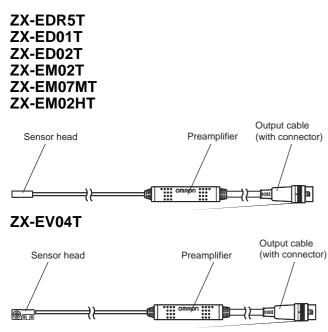


Amplifier Units

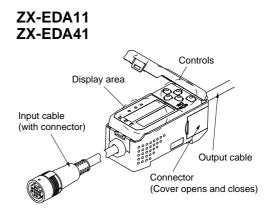

Calculating Unit

ZX-CAL2

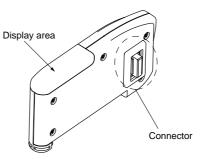

ZX-E Series Smart Sensors (Inductive Displacement Type)

Design Precautions

Conform to the specified ratings and performance. Refer to *Specifications* on page 2 for details.

Objects of certain materials or shapes may not be detectable, or the detection accuracy may not be sufficiently high.

Environment

Do not operate the product in locations subject to flammable or explosive gases.

In order to ensure safe operation and maintenance, do not install the product in the vicinity of high-voltage devices or power equipment.

■ Wiring

Do not use the product at voltages exceeding the rated values. Doing so may result in damage.

Do not connect the product to an AC power supply or connect the power supply in reverse.

Do not short-circuit the load for open-collector output.

Correct Use <u>Design Precautions</u>


Power Supplies

Allow a warm-up period of approximately 30 minutes after turning ON the power supply.

Mutual Interference

Up to 5 Sensor Heads can be used together by connecting the ZX-CAL2 Calculating Unit between Amplifier Units.

When installing Sensor Heads facing each other or in parallel, separate them by the minimum distances given in the table below.



Mutual Interference

Model	A	В	
ZX-EDR5T	5 mm	20 (3.1) mm	
ZX-ED01T	10 mm	50 (5.4) mm	
ZX-ED02T	20 mm	50 (8) mm	
ZX-EM02T	20 mm	50 (10) mm	
ZX-EM07MT	100 mm	150 (30) mm	
ZX-EV04T	80 mm	50 (14) mm	
ZX-EM02HT	20 mm	50 (12) mm	

Note: The figures in parentheses apply when the mutual interference prevention function is used.

Compatibility

Sensors and Amplifier Units are mutually compatible. Sensors can be added or replaced individually.

Influence of High-frequency Electromagnetic Fields

Using the product in the vicinity of devices that generate high-frequency electromagnetic fields, such as ultrasonic cleaning equipment, high-frequency generators, transceivers, mobile phones, and inverters, may result in malfunction. Do not lay the power cable for the product together with or in the same duct as high-voltage lines or power lines. Doing so may result in incorrect operation or damage due to induction.

Do not connect or disconnect connectors while the power is ON. Doing so may result in damage.

Adjustment

Setting

When setting threshold values, ensure that the Amplifier Unit's judgement output hold input line is ON so that there is no judgement output to external devices.

Other Precautions

Do not attempt to disassemble, repair, or modify the product.

Dispose of the product using standard procedures for industrial waste.

These Sensors are not compatible with the ZX-L \Box Smart Sensors (laser type). Do not connect combinations of ZX-E \Box Smart Sensors and ZX-T \Box Smart Sensors.

Influence of Metallic Objects

When installing the product, separate it from metallic objects by the distances shown below.



Influence of Metallic Objects

Model	d	D
ZX-EDR5T	8 mm	9 mm
ZX-ED01T	10 mm	
ZX-ED02T/EM02T	12 mm	
ZX-EM07MT	55 mm	20 mm
ZX-EV04T	16 imes 32 mm	4.8 mm
ZX-EM02HT	18 mm	9 mm

<u>Wiring</u>

Wiring Check

After wiring is completed, before turning ON the power, confirm that the power supply is connected correctly, that there are no faulty connections, such as load short-circuits, and that the load current is correct. Incorrect wiring may result in failure.

Cable Extension

Do not extend the cable for the Sensor and the Amplifier Unit to a length exceeding 10 m. Use a ZX-XC A Extension Cable (sold separately) to extend the Sensor's cable. Extend the Amplifier Unit's cable using a shielded cable of the same type.

Power Supply

When using a commercially available switching regulator, ground the FG (frame ground) terminal.

If the power supply line is subject to surges, connect a surge absorber that meets the conditions of the operating environment.

Calculating Unit

When using a Calculating Unit, connect the linear output ground of the corresponding Amplifier Unit.

Connectors

Do not connect or disconnect connectors while the power is ON.

Be sure hold to connectors by the cover when connecting or disconnecting.

<u>Mounting</u> Handling

When mounting the Sensor Head, do not apply excessive shock by, for example, using a hammer. Doing so may result in damage or a reduction in the level of water-proofing. Also, there are screw-shaped models that require a toothed washer to allow for a tolerance in the tightening torque for the nut.

When using a heat-resistant model like the ZX-EM02HT, develop designs that account for thermal expansion due to rising sensing object temperature so the sensing object will never touch the sensing surface. Also note that any sudden rise in temperature will shorten the service life of the product.

Tightening Torque

Do not apply excessive torque when tightening the nut. Use a toothed washer if necessary.




Model	Tightening torque	
ZX-EM02T	15 N·m	
ZX-EM07MT		
ZX-EM02HT	59 N·m	

Note: The above figure applies for use with a toothed washer.

Mounting Cylindrical Models:

Tighten set screws with a tightening torque of 0.2 N·m max.



Model	Α
ZX-EDR5T	9 to 18 mm
ZX-ED01T	
ZX-ED02T	11 to 22 mm

Installation Location

Do not install the product in the following locations.

- · Locations subject to temperatures outside the specified range
- Locations subject to condensation due to sudden temperature
- changesLocations subject to humidity levels outside range 35% to 85%
- Locations subject to corrosive or flammable gases
- Locations subject to dust, salts, or metallic powder.
- Locations directly subject to vibrations and shocks
- Locations subject to direct sunlight
- · Locations subject to splashes of water, oil, or chemicals
- · Locations subject to strong electromagnetic or electrical fields

Maintenance and Inspection


- Be sure to turn OFF the power supply before adjusting or removing
- the Sensor Head.Cleaning:
- Do not use thinners, benzine, acetone, or kerosene for cleaning.

Dimensions

Sensors

Sensor Heads

ZX-EDR5T

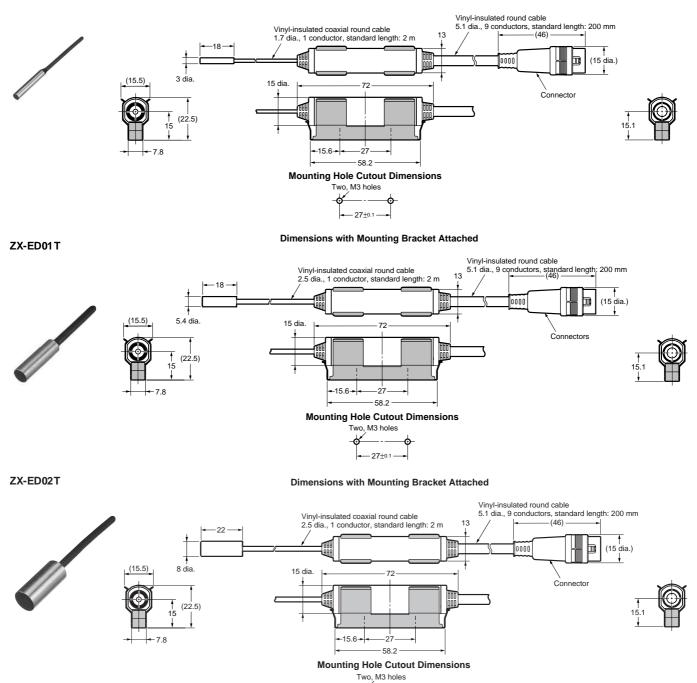

ę


- 27±0.1

Dimensions with Mounting Bracket Attached

11


ZX-EM02T

Dimensions with Mounting Bracket Attached

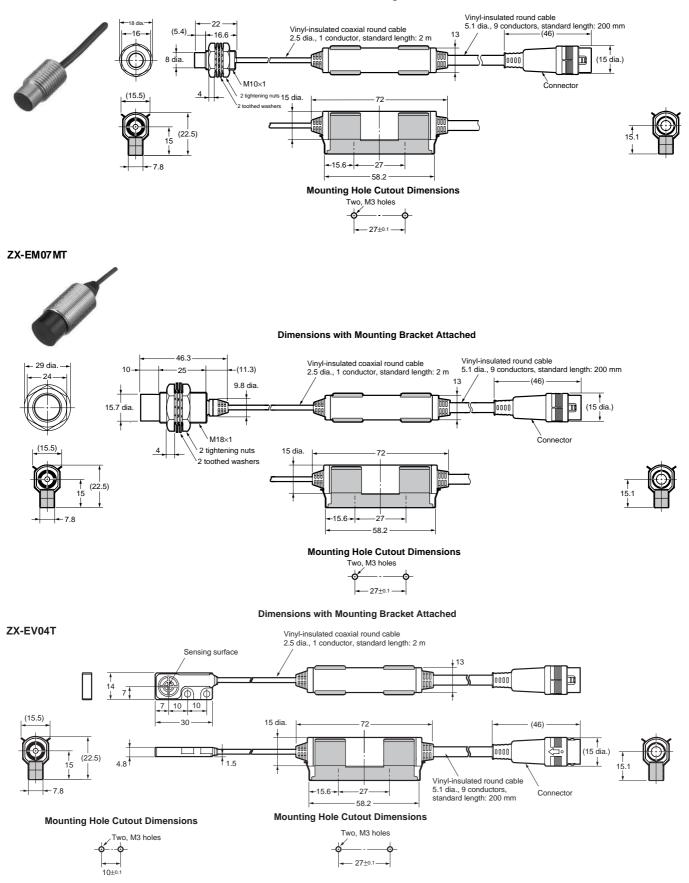

OMRON


13

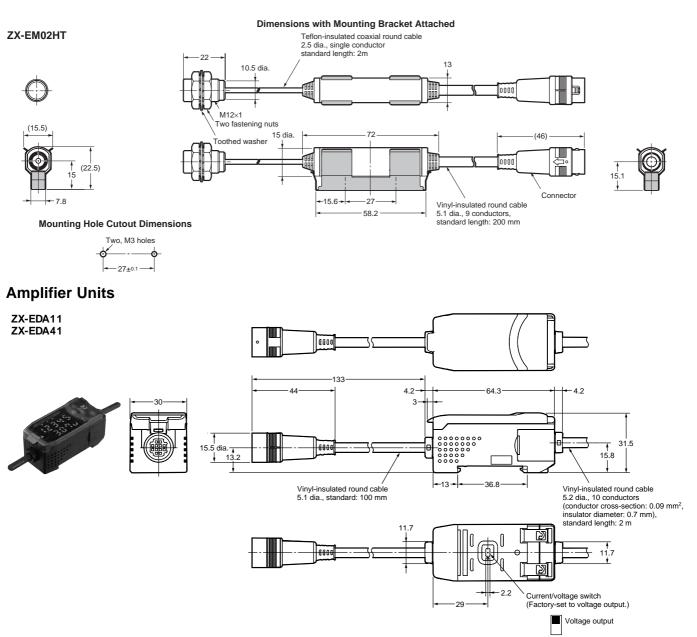


Accessories (Sold Separately)

Preamplifier Mounting Bracket

ZX-XBE1

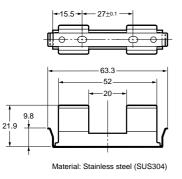


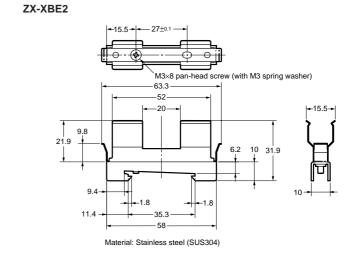

Calculating Unit

ZX-CAL2




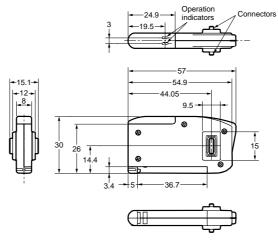

-15.5-+


ZX-series Communications Interface Unit



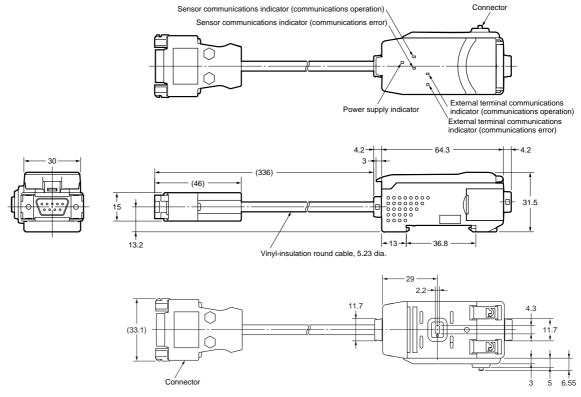

Cables with Connectors on Both Ends (for Extension)

ZX-XC1A (1 m) ZX-XC4A (4 m) ZX-XC8A (8 m)



ALL DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice. Cat. No. E331-E1-02

OMRON Corporation

Industrial Automation Company

Application Sensors Division Sensing Devices and Components Division H.Q. Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan Tel: (81)75-344-7068/Fax: (81)75-344-7107

Printed in Japan 0803-1M (1002) (S)